

Pull-Banner Display Stand

primary image

Assembly instructions:

- 1 Remove your display stand from its carry bag.
- 2 Turn the feet 90°.
- 3 Remove the pole which is stored in the underside of the cassette.
- 4 Push all three sections of the pole together.
- 5 Insert the pole into the cassette, ensuring that it is fully located to the bottom.
- 6 Pull the banner straight upwards, being careful not to damage the graphic.
- 7 Hook the top rail onto the top of the pole.



We also offer a full range of other products, including flyers, brochures, business cards, websites and much more.

Please see our website – www.primaryimage.com – for more details, or contact us via hello@primaryimage.com or 01702 680 690.